



Tecflex Clip & Banding

THC/ TECFIXCK



Description

Tecfix is a new banding system which has been designed and is engineered using the very latest technology and equipment. As a result Tecfix offers the benefits of both quality engineering and very competitive pricing.

With the Tecfix system it is easy to produce worm drive clips of any size in seconds. The innovative built in measuring system enables any size up to 350mm diameter to be simply "dialed up" eliminating measuring, guesswork and wastage.

The unique one-piece locking mechanism with tilting head provides very fast clamping by hand - only final tightening by screw or hex. head driver is necessary to complete a perfectly airtight joint.

Advantages

- Innovative built in measuring system eliminates wastage and saves time.
- Unique one-piece locking device - no more lost or dropped screws.
- Fastest installation time of any continuous banding system - saving time and money.
- Infinitely adjustable continuously threaded stainless steel banding.
- No special tools required.
- Flexible stainless steel banding follows the contours of duct or pipe without the need for pre-forming.
- Plastic dispenser for ease of transport and storage.
- Re-usable - time and time again!

Specification

9mm wide continuously threaded stainless steel band (AISI 430, DIN 14016 -W2) with rounded edges. Locking mechanism components manufactured from hardened mild steel. Housing: Nickel plated. Screw: 7mm hexagon slotted screw, zinc plated and passivated. Clamping force - 3.5 N/M (complies with DIN 3017).

Application

The Tecfix system is ideal for connecting flexible hoses, ventilation and air conditioning flexible ductings, dust bags, signs - in fact, just about any clamping application!

Packaging

Tecfix banding - 30 metre coil in dispenser.

Tecfix locks- 50 per box.

Tecflex Clips

Pre-formed clips using Tecfix banding and quick release locks are also available on an ex-stock basis. The continuously threaded banding means that clips can be used on all intermediate sizes.

Diameter Range

- A. 60-135mm.
- B. 60-170mm.
- C. 60-215mm.
- D. 60-325mm.
- E. 60-525mm.



Tecflex Clip & Banding

THC/ TECFIXCK


Installation



A. Fold a short section of the band end over and hook into the retaining slot on the rotating arm.



B. "Dial up" the required clip diameter aligning the arm with the radial dimensioned markings on the case and cut to length at the cutting indicator mark.

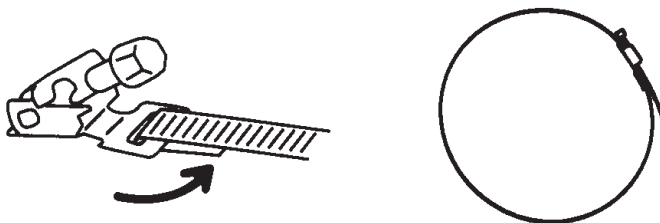

C. Place the hooked end of the cut section through the slot in the locking mechanism and press flat.

Wrap the completed clip around the joint, clamp in place by hand and tighten with a screw or hex. head screwdriver.